

# SIEMENS

# SIEMENS



Siemens Aktiengesellschaft,  
issued by Communications,  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2005  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens.com/cl75](http://www.siemens.com/cl75)

Designed for life

CL75

---

Safety precautions .....	2	Organiser .....	38
Phone overview .....	4	Games & app .....	40
Display symbols .....	6	Extras .....	41
Getting started .....	7	Settings .....	43
General instructions .....	11	Fast dial .....	52
Standard functions .....	13	My stuff .....	54
Security .....	14	Customer Care .....	55
Text entry .....	16	Care and maintenance .....	57
Calling .....	18	Product data .....	58
Contacts .....	20	SAR – European Union (RTTE) .....	60
SIM contacts .....	22	SAR – International (ICNIRP) .....	61
Call records .....	24	Guarantee certificate (UK) .....	62
Internet .....	26	Guarantee certificate (IRL) .....	63
Camera .....	28	License agreement .....	64
Message .....	30	Menu tree .....	67
SMS text .....	31	Index .....	73
MMS .....	33		
Voice mailbox/CB .....	37		

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



The ringtones (page 44), info tones (page 48) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (page 18). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!  
These safety instructions also apply to Siemens original accessories.

# Phone overview

## ① Loudspeaker

## ② Main display

Display time, date, service provider, available functions, and symbols of battery and reception.

## ③ Right/Left soft key

Select functions available on the bottom line of the display.

## ④ On/Off/End key

- Switched on/off: press and **hold** to switch the phone on/off.
- During a conversation or in an application: press **briefly** to go back a level. Press and **hold** to return to standby mode.
- In standby mode: press and **hold** to switch off the phone.

## ⑤ Navi key

- Press down the navi key to start an application or function.

### In standby mode:

- Open main menu.
- Open Shortcut.
- Open Contacts.

### In lists, messages and menus:

- Scroll up and down.

 
### During a call:

- Set volume.
- Open menu.

## ⑥ Additional key for WAP access

(if required, and no other default setting is made.)

## ⑦ Number keys

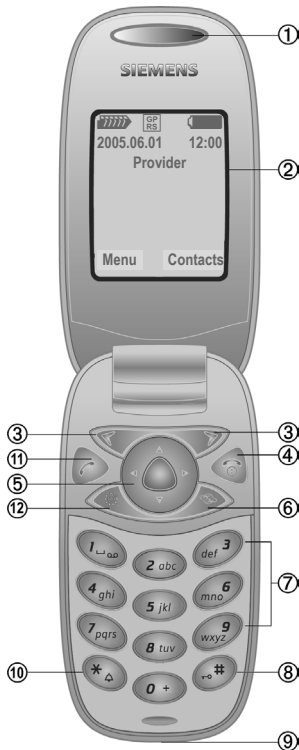

## ⑧ Key lock

Press and **hold** in standby mode: switch key lock on/off.

## ⑨ Connection socket

For charger, headset, flash, etc.

### ⑩ Ringtone

- Press and **hold** in standby mode: switch ringtones on/off (except alarm).
- Press and **hold** on incoming call: switch off ringtone for this call only.

### ⑪ Call key

 
Dial phone number/name displayed/highlighted, take calls. Show last phone numbers dialed in standby mode.

### ⑫ Display key

Press to switch the display on/off and to use it as a mirror.

#### Note

The keypad is still active when the display is turned off.

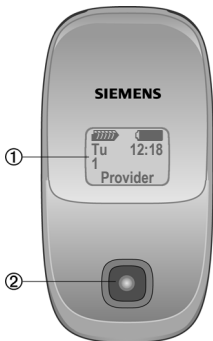

### ① Second display

Displays time, date, service provider, and battery and reception icons.

### ② Camera lens

### ③ Loudspeaker

### ④ Battery bay

### ⑤ Volume keys




Navigate up/down

### ⑥ Infrared Interface (IrDA)

### ⑦ Camera button

Press to take a self-portrait picture (see page 28) via the mini display.
   
### ⑧ Handsfree mode

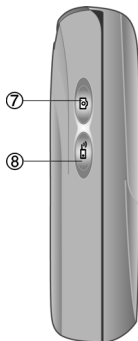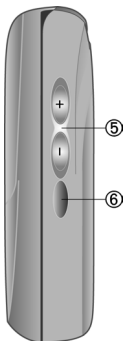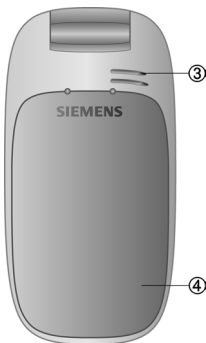

# Display symbols

## Display symbols (selection)



Signal strength



Battery charge level, e.g. 50%



Contacts



Records



Internet



Camera



Messages



Organiser



Ringtones



Alarm clock



Extras



My stuff



Settings



Games



All calls are diverted



Ringer off



Short ring (beep) only



Ringtone only if the caller is stored in the Contacts.



Alarm set



Auto answer features on



Activated and available



Keypad locked

## Message symbols (selection)



Unread



Read



Sent



MMS received



MMS with DRM contents

# Getting started

 
## Inserting the SIM card/ battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

### Additional Information


Please switch your phone off before removing the battery!

Only 3 V SIM cards are supported. Please contact your service provider if you have an older SIM card.

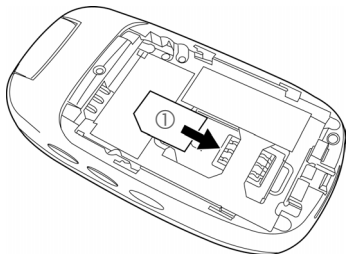

Note the SIM card direction ①.

 - Insert the SIM card into the slot with the contact surface facing **downwards** (ensure that the chamfered corner is in the correct position).
- Reinsert the battery into the phone ②, then press it downwards until it engages ③.

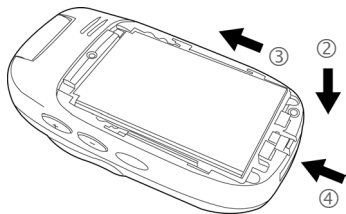


- Slide backwards to open the battery compartment cover. Push the battery towards the hinge and lift it up.

- To fit a lanyard: thread the attachment loop over the hook below the battery ④. Close the battery cover to secure the lanyard (see page 8).



 
- Place the cover in position and push it towards the front until it latches into place.

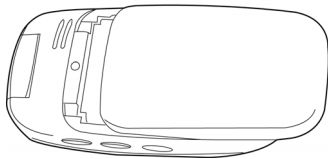

## Charging the battery

### Charging the battery

 The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **three hours**.

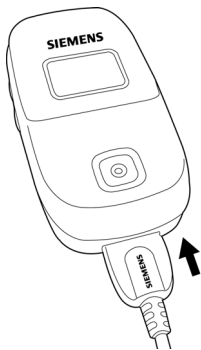

Display during charging.

## Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5°C to 45°C. If the temperature rises/falls 5°C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

## Operating time

The operating time depends on the respective conditions of use. Extreme temperatures reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Call time: 180 minutes

Standby time: 220 hours minimum

## Charge symbol not visible

If the battery is fully discharged, the charge symbol is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

**Only use the plug-in power supply included in delivery!**

## Display while in service

Charge level display during operation (empty – full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle.

**Do not remove the battery until the phone has finished charging.**

### Additional information

The power supply unit heats up when used for a long time. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock will be reset.

## Switching phone on/off



Press and **hold** the On/Off/End key to switch on the phone.

## Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters \*\*\*\* appear to ensure nobody can read your PIN on the display. Correct with **Clear**.

**OK**

Confirm. Logging on to the network will take a few seconds.

### Additional information

Change PIN.....page 14

Clearing SIM card barring.....page 15

## Emergency number (SOS)

**Only to be used in real emergencies!**

By pressing the **SOS** soft key you can make an emergency call on any network without a SIM card and **without** entering a PIN (not available in all countries).

## Switching on your phone for the first time

### Time / date

When using the phone for the first time, set the clock so that it displays the correct time. You will not have to make this setting again.

**Edit** Press this key to start setting the date and/or time.

**Change** Press to select the date from a calendar.



First enter the date (day/month/year), then the time (24 hours, including seconds).

**Save** Press this key to confirm the setting.

### Time zones



Select the time zone.

**Options** Select the desired time zone. Or choose to turn **Auto time** on/off.

## Copying SIM addresses

The first time you insert your SIM card, the entries on it can be copied to your phone memory. Please **do not interrupt this procedure**. During this time, do **not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (please see page 23).

# General instructions

## Standby mode

When the phone displays the name of your service provider, it is in **standby mode** and **ready for use**.



**Press** to return to standby mode from any situation.

## Signal strength



Strong signal received.



Weak signal. The signal quality for making and receiving a call is poor. This may lead to loss of connection.

## Digital Rights Mgmt. (DRM)

Remember that your phone has digital rights management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc.

## Main menu

The main menu is displayed graphically with symbols:



Call up the main menu from standby mode.



Select the application symbols.



Start an application.

## Main menu options



Open menu.

Different functions are available depending on the context:

**Big letters**

Select between two font sizes.

## User guide

### Menu controls

 
In this manual, all the steps are shown graphically and simply as follows:



This comprises the following steps:



Open main menu.



Navigate up/down or right/left to the desired item.

### Change

Confirm your choice (by pressing the left or right soft keys).

### Menu speed dialling

All menus are numbered so that a function (such as writing a new SMS) can be selected directly from stand-by mode by entering a number:



Press this key to display the main menu.



Press this key for **Messages**.

## Symbols

The following symbols are used to explain operation:



Enter numbers/letters



On/Off/End key



Call key



Right/left soft keys



Displays a soft key function.



Press down on the navi key, e.g., to call up the menu or to confirm a setting.



Press the navi key in the direction indicated.



Function dependent on service provider, special registration may be required.

# Standard functions

## Option menus

Functions which appear repeatedly in the options menu are listed here.

<b>Options</b>	Open menu.
<b>Edit</b>	Open the entry to edit.
<b>View</b>	View entry details.
<b>Delete/ Delete all</b>	Delete one/all entries after confirmation.
<b>New entry</b>	Create a new entry.
<b>Send</b>	Select transmission service and medium for sending.
<b>Reply/ Reply all</b>	The sender becomes the recipient. "Re" is placed in front of the subject matter and the received text is transferred into the new message.
<b>Save</b>	Store entry.
<b>Save to:</b>	Save recipients in the current Contacts.
<b>Text input (page 16)</b>	<b>T9 preferred:</b> Activate/deactivate T9 input. <b>Input language:</b> Select language for text.
<b>Capacity</b>	Display memory capacity.
<b>Help</b>	Display instructions.

## Highlighting mode

Highlight one or more entries in order to perform a function on it/them.

<b>Options</b>	Open menu.
<b>Mark</b>	Activate mode.
<b>Mark</b>	Highlight a non-highlighted entry.
<b>Unmark</b>	Remove the highlighting from a highlighted entry.

Additional highlighting functions:

<b>Mark all</b>	Highlight all entries.
-----------------	------------------------

# Security

This section explains how to protect your phone against unauthorised use.

**Keep these confidential numbers in a safe place where you can access them again if required.**

 
## Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



## PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.



Go to the PIN control.



Select to change PIN control.



Enter PIN.



Confirm input.



Press to store the entry.

## Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.



Enter **current** PIN.



Confirm.



Enter **new** PIN.



Enter **new** PIN again.



## Change PIN2

(Display only if PIN2 is available).

Proceed as with **Change PIN**.

## Changing the phone code

You define the phone code (4-8 digits) when you call up a phone-code protected function for the first time (see page 14). It is then valid for all phone-code protected functions.

If you fail to enter the correct PIN number for the third time, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service Center (page 55).

## Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions.

If the PUK (MASTER PIN) has been lost, please contact your service provider.

## Preventing accidental activation

Even if PIN use is deactivated, confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press and **hold** the key.



Press **OK** to switch on the phone.



Press **Cancel** or take no action. The phone does not switch on.

Lock or unlock the keypad in standby mode. In each case:



Press and **hold**.



# Text entry

## Text entry without T9

Press the number key repeatedly until the required letter appears.

Example:



Press once **briefly** to enter the letter **a**, twice to enter **b** etc.



Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.



Move the cursor (forward/back).



Press **briefly**: swap between **abc**, **Abc**, **T9abc**, **T9Abc**, **T9ABC**, **123**.

Press and **hold**: all input variants are displayed.



Press **briefly**: special characters are shown.

Press and **hold**: open edit menu.



Press **once/repeatedly**:

., ? ! ' " 0 + - ( ) @ / : \_

Press and **hold**: enters 0.



Enters a space.

Press **twice** = line break.

## Special characters



Press **briefly**.

1)	←	¿	¡	_	;	.	,
?	!	+	-	*	'	:	“
/	(	)	¤	¥	\$	£	€
@	\	&	#	[	]	{	}
%	~	<	=	>		^	§
Γ	Δ	Θ	Λ	Ξ	Π	Σ	Φ
Ψ	Ω						

1) Space



Navigate to the desired characters.



Select the character/Clear the character.

## Options Menu

Send, Save, Format text, Picture & sound, Insert, Delete text, Send with.....

## Text entry with T9

"T9" combines the correct value from the various key inputs.

 


Activate/deactivate text entry mode, e. g. T9.



Navigate to the desired mode such as T9abc. Select.


## Selecting Input language



## Writing with T9

It is best if you finish a word without looking at the display.


 
You simply press the keys where the relevant letter is located **once only**.



Do not use special characters such as Å. Instead use the standard characters such as A and T9 will do the rest for you.

## T9 word suggestions

  If several options are found in the dictionary for a word, the most probable is displayed first.






To add a new word to the dictionary:



**Spell** Select and enter word without T9, then **Save**.

## Correcting a word

   Words written with T9:



### Additional information

  

T9® Text Input is licensed under one or more of the following:  
U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;  
United Kingdom Pat. No. 2238414B;  
Hong Kong Standard Pat. No. HK0940329;  
Republic of Singapore Pat. No. 51383;  
Euro. Pat. No. 0 842 463 (96927260.8)  
DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

## Text module



Text modules can be stored in the phone for adding to your messages (SMS, MMS).

## Calling



Enter the number (always with area/international dialing code).

### Clear

A **short** press clears the last digit; a **long** press clears the entire phone number.



Dial phone number.

## Ending a call



Press the End key **briefly**.

**Or**

Close the clamshell.

## Setting the volume



During the call, press up/downwards in order to regulate the volume. Or you may press the volume key on the right side of your phone.

## Redialling previous numbers



Press **twice** to redial the phone number **last** called:

Call up the redial list:



Press **once**.



Pick out a phone number.



Press to redial.

## Accepting a call

With clamshell open:



Press to receive a call.

With clamshell closed: open phone to answer a call.

## Rejecting a call



Press to reject a call.

### Additional information

Accept the call before bringing the phone to your ear in order to avoid ear damage caused by the ringing tones.



Store phone number in the Contacts.

### Handsf.

Playback via loudspeaker (hands-free calling).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!



Press and **hold** to switch microphone off.

### International dialling codes



Press and **hold** until a "+" is displayed.

### Country:

Select country.

## Call options

### Options

See functions only available **during** the call.

## Swapping between 2 calls



### Establishing a second connection

**Hold** Hold current call, then dial the new phone number.

**Swap** Swap between calls.

### Incoming calls during a call

You will hear a "call waiting" tone and you can now:

- **Accept the waiting call in addition to the first**

**Swap** Accept the call and put the current call on hold.

- **Reject the waiting call**

**Reject** Reject the call.

- **Accept the waiting call and end the current call**



End a call.



Accept a new call.

### Ending call(s)



Press the End key.

## Conference



You can call up to 5 conference participants one after the other. Once you have established a connection:

**Hold** Select to put the current call on hold.



Now dial a new number. When the new connection is established ...

**Options** ... open the menu and select **Conference**. Repeat until all participants are connected.

### End



When the End key is pressed, **all** calls in the conference are ended.

## Tone sequences (DTMF)

Open Phonebook to select a number to send as a DTMF code.

**Options** Open menu and select **Send DTMF**.


# Contacts



 →  → Select function.

You can save phone numbers or information either in the phone's memory or in the SIM card memory. In Contacts all entries are shown, whereas the SIM contacts only list entries saved on the SIM card.

## Show entries



The entries in the Contacts are shown.

 You may scroll between different categories for contacts: **All contacts**, **Groups**, and **SIM contacts**.

 /  Select a name with the first letter and/or scroll.

## New entry


Create a new entry in your phone-book or SIM card memory.

 →  → **New entry**  
→ **SIM or Phone**  
→ **Edit**

Entry items differ between SIM and phone memory. The SIM memory usually contains items such as **Name**, **Phone**, **Groups**, **Location**, and **Record no.** The phone memory contains more entry items: **Name**, **Phone**, **Tel./office**, **Tel./mobile**, **Fax**, **Notes**, **Company**, **Business address**, **Post code**, **Country**, **City**, **URL**, **Birthday**, **Date**, **Time**, **Groups**, **Caller ID** : and **Melodies**.

## Business card

Create your own business card to send to a different GSM phone. If no business card has been created yet, you will be asked for your input.

 Move from field to field to put in your details.

**Save** Press to store the entry.

### Additional information

The content of the business card meets international standards (vCard). Copy numbers from Contacts.

## Predial

The phone allows you to predefine 5 phone numbers so that you can speed up dialling.



- All contacts/SIM contacts
- Predial
- Edit

## Groups

9 groups are specified in your phone, enabling you to arrange your Contacts entries clearly. You can rename 8 groups.



Open **Contacts** (in standby mode).

<Groups> Select (the number of entries is listed after the group name).



Select group.

# SIM contacts

Entries (on the SIM card) are managed separately from those in the phone memory. They are arranged according to name, phone, groups, location, and record no.

## New entry

If the SIM contacts has been selected as the default book:



Open **Contacts** (in standby mode).



Select **<New entry>**.



Display input fields.



Navigate between and fill in the input fields.

### Phone number

Always enter phone number with dialling code. An entry cannot be saved without a phone number.

### Name

Enter first and/or last names.

### Groups

Default **No group**

Important phone numbers may be put into one group (**VIP**).

### Location

Default: **SIM**

Special SIM cards can save phone numbers in a protected area (**<Protected SIM>**) (PIN2 required).

### Record no.

Is automatically assigned to every entry. The phone number can be dialled with your record number.

**Save**

Press to store the new entry.

## Calling/sorting an entry



Open **Contacts**.



Select a name with the first letter and/or scroll.



Number is dialled.

## Editing an entry



Select entry in SIM contacts.

**Options**

Press.

**Edit**

Select.



Select desired input field.



Make changes.

**Save**

Store the entry.

## SIM contacts

The following functions are available, depending on the current situation.

**Options** Open menu.

<b>View</b>	See details.
<b>Copy to phone</b>	Copy the selected entry to the phone.
<b>Move to..</b>	Move the highlighted entry to a desired group.
<b>Delete</b>	Delete the entry
<b>Mark</b>	Mark entry.
<b>Send</b>	Send entry via SMS, MMS or IrDA.
<b>Sort</b>	Sort entries by first or last name.
<b>Capacity</b>	Status of used and free memory.

## <Spec. books>



Open **Contacts** and select **<Spec. books>**.

## <Own numbers>

Enter "own" phone numbers (e.g., fax) for information.

## <SIM contacts>

Entries stored in the phonebook on the SIM card can also be used on other GSM phones.

## <Protected SIM>

On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.



## Call records

Phone numbers are saved to make it easier to redial them.



Select record.



Open call list.



Select phone number.



Dial phone number.

Every record list has a capacity of 50 entries:

### Dialled calls

Access to the last numbers dialled.



Fast access in standby mode.

### Missed calls

The phone numbers of calls that you have received but not answered are stored for call back purposes.

### Received calls

Accepted calls are listed.

## Call options

### Options

Open the Option menu. Functions may be different depending on the text: **View**, **Add to SIM contacts**, **Store**, **Delete**, **Delete all**, **Send SMS**, and **Send MMS**.

## Other calling information

Other calling information is saved for your reference. Information contains details for call duration and call cost.



Scroll left or right to the call history.

Available information is:

**Last call duration**, **Total incoming duration**, **Total outgoing duration**, **Total cost** and **Remaining units**.



Navigate to the desired item.

### Options

Open the following options:

#### Reset

Delete the item.

#### Reset all

Delete all items from the list.

---

## Charge settings

Opens menu for the following options:

### Currency

Edit your currency.

### Personal rate

Enter the currency as well as the charge per unit and time.

## Auto display

Call duration and charges are automatically displayed.

### Max cost

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.

# Internet

Get the latest information from the Internet that is specifically adapted to the display options of your phone.

In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

## Internet



The browser is activated with the pre-set option as soon as you call up the function (browser settings may be specified/pre-assigned by service provider).

## Main menu

<URL-Siemens/Provider>

Open the predefined Siemens URL.

**Bookmarks** Display bookmarks stored in the phone; save bookmark.

**Internet** Link to the Internet.

**WAP settings**

Enter to edit/launch the WAP.

## Ending connection



Press and **hold** to cancel the connection and close the browser.

## Navigation in the browser



- Select a link.
- Settings, status, on/off.



Press briefly to return to the previous page.



- Open the input field/link forward/back.
- Scroll one line.

## Entering special characters



Select important special characters.

Your Internet browser is licensed by:



**OPENWAVE**

©1999-2004



RSA BSAFE Enabled

## Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

### Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

### Setting a profile manually

You will receive the necessary data from the service provider or via the "Setting Configurator" at:

[www.siemens.com/  
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)

## Bookmarks



→ Bookmarks

URLs stored in the phone are displayed. New bookmarks can be saved. It is possible to process or manage bookmarks in files.

# Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a start up/shut down animation or a screensaver
- send the photo/video via MMS.

## Switching on



Or



Press the camera button on the side of the phone.

Select the mode from the option menu.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness.



Zoom factor.



Flash connected.

Beneath the preview image, you will find a reference to the selected resolution.

## Taking a picture

This phone allows you to take a picture with the clamshell open or closed. With the clamshell open, you may take a picture of others via the main display, while the closed clamshell allows you to take a self-portrait via the mini display.

To take a picture with the clamshell open:



Take a picture.



Display the preview image of the next photo.

To take a picture with folded clamshell:



Take a picture.

The picture is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu.

Settings prior to taking a picture:



Sets the brightness.



Sets the zoom factor.

## Image resolution

A setting can be made for the quality of the image regardless of the preview image resolution.

Premium:	<b>640 × 480</b> (VGA)
High:	<b>320 × 240</b> (QVGA)
Medium:	<b>160 × 120</b> (QQVGA)

The resolution may decrease depending on the selected digital zoom.

## Record Video

The video mode resolution is the same as the preview image resolution.



Start the video recording.



End the video recording.

A red dot appears in the top right of the display while the video recording is being made.

**Play** Plays the video recording.

## Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is charged constantly while connected to the phone. This reduces the stand-by time.



This symbol flashes when the flash is being charged. For settings, see options menu.

## Camera options

The following functions are available, depending on the current situation.

**Options** Open menu.

<b>Change mode</b>	Change between viewfinder camera or video.
<b>Setting</b>	<ul style="list-style-type: none"> <li>• File name for recordings</li> <li>• Image resolution &amp; quality</li> </ul>
<b>View pictures</b>	Displays list of photos.
<b>Flash</b>	Choose between: <b>Automatic, Off, Red eye.</b>
<b>Shutter sound</b>	Select to define a sound from the defined list.
<b>Twilight</b>	Select to turn twilight effect on/off.
<b>Portrait</b>	Select to turn portrait effect on/off.
<b>Other videos</b>	Display list of videos.
<b>Help</b>	Follow the instructions to take a picture.
<b>Exit</b>	Exit the menu.

# Message

## Inbox

Your inbox is a inbox folder containing all the texts and call records that have been received. The entries are marked with a symbol to indicate their type and status.

To call up the inbox folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol.

When you open an entry, the relevant application also starts. After a set time (**Options**), entries which have already been read and opened are only displayed in the message-related incoming lists.

You will find the following **message types** in the inbox folder: **SMS text**, **MMS**

### System messages

Message about **MMS**, **Missed alarms**, **Missed appts.**, **Missed calls**, **Dictation machine**.

## Message lists

All **SMS text**, **MMS** are displayed in four separate lists.



→ **Inbox**

→ Select message type.

List of received messages.



→ **Draft**

→ Select message type.

List of saved drafts.



→ **Unsent**

→ Select message type.

List of messages not yet successfully sent.



→ **Sent**

→ Select message type.

List of sent messages.

### **Options**

Call up the function menu to process the messages.

# SMS text

You can use your phone to transmit and receive messages (up to 1520/660 characters, depending on entry method) on your phone. They are automatically divided into several "normal" messages (note higher charges). You can also insert pictures and sounds in an SMS.

## Writing/sending an SMS

 →  → Create new → SMS text



Enter text (see also page 16).

**Options** Text creation functions.



Start sending procedure.



Select phone number from the Contacts or enter it.



The SMS is transmitted to the service centre to be sent.

## Special functions

### Picture & sound

Send the pictures and tones with or without accompanying text. Remember that these may be protected (DRM, page 11).

With the text input field open:

**Options**

Open menu.



Select **Picture & sound**. The menu contains: **Fix animations, Fix sounds, Own animations, Own pictures, Own sounds**



Select section.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For **Fix animations/Fix sounds**:



The selection is displayed/played back.

**Change**

The selection is added to the SMS.

### SMS archive

 →  → SMS archive

The list of SMS messages stored in the phone's archive is displayed. They are sorted by Inbox or Outbox.



## SMS to group

You can send an SMS message as a "circular" to a recipient group.

**Options** Open menu.

**Send** Select.

**Groups** The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Sending is started after a security prompt.

## Reading an SMS



Arrival of a new SMS announced in the display.

The **Inbox** is opened. It offers you a quick overview of the messages currently received.



To read the SMS, press the navi key.



Scroll through message line by line.

### Additional information



If this symbol flashes, the SIM memory is full. Delete or file messages.

## Replying to an SMS

After reading the received message, you may reply right away. The new additional text is placed above the received text.



Reply immediately.

## Making SMS settings

### SMS signature



→ → Message setup  
→ SMS text → Signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

### Setting a signature



Select **Edit** to personalize your signature.

# MMS

The **M**ultimedia **M**essaging **S**ervice enables you to send texts, pictures/ videos and sounds in a combined message to another mobile phone.

Depending on your phone setting, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

## Writing an MMS

An MMS consists of the address header and the content. This may consist of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, page 11).

## Creating a standard MMS



First select an object for processing to be added to the first page of the MMS:

**Picture**      Select.



Display picture/video functions: **Insert**, **Camera**

**Sound**      Select.



Display sound functions: **Insert**, **Record**

**Text**      Select.



Display text functions (see also page 16).

## Options

**Options**      Open menu.

**Insert item**      Select from Picture, Video, Sound, Text, Digital camera, Video camera, Sound recorder, and Page.

**Picture**      For example, after you select an item, the menu goes to **My stuff**, and you may opt to insert any multimedia item from the **My stuff** folder.

## Writing options

**Options**      Open menu.

**Send**      Send MMS.

**Insert item**      Insert items such as pictures, video, sound, text, digital camera, video camera, sound record, and page.

**Preview MMS**      Play entire MMS on the display.

**Preview page**      Preview the page.

<b>Attachment</b>	Add attachment: <ul style="list-style-type: none"> <li>• File</li> <li>• Business card</li> <li>• Appointments</li> </ul>
<b>Page list</b>	Display MMS pages for viewing and/or changing.
<b>Msg. details</b>	View the message details.
<b>Timing</b>	Set the time.
<b>Save</b>	After creating MMS, save it as a template.
<b>Delete</b>	Delete the MMS.
<b>Help</b>	
<b>Delete item</b>	This function is available after you insert an item into the MMS. Select to delete the item you just inserted.
<b>Replace object</b>	This function is available after you insert an item into the MMS. Select to replace with other objects.

## MMS templates



MMS templates are MMS messages which are saved with no address. They can be sent as new MMS messages or used as part of a new MMS.

## Sending an MMS

The page(s) of the new MMS has (have) already been created.



Open address only.

**Subject:** Enter a brief description of the MMS.

**To:** Enter one or more phone number(s).

**Cc:** Send a courtesy copy to other recipients.

**Sender visibility:** Select to turn your visibility status on/off.

**Priority:** Options include Normal, High, and Low.

**Delivery report:** Select whether you wish to receive a delivery report or not.

**Read report:** Select to obtain a report as to whether the receiver has read the message.

**Expiry time:** Expiry time includes **Maximum, 1 hour, 3 hours, 6 Hours, 12 hours, 1 day and 1 week.**



Start sending procedure.



The MMS is sent after confirmation.

## Receiving an MMS



Arrival of new MMS/notification announced on display.



Press to view details of the received message.

In order to receive the complete MMS **later on**, the message must be opened.

**Retrieve** Start transmission.

## Read

An MMS has been received in full.



Start playback.

Key functions for playback:



To the next page.



Press **briefly once** to return to the start of the current page.



Scroll the message up or down.



End

### Note

To adjust volume, please use the side keys.

The downloaded message includes the following details:

**Subject:** A brief description of the MMS.

**To:** One or more recipients' phone number(s).

**From:** Indication of the sender's phone number.

**Cc:** Send a courtesy copy to other recipients.

**Bcc:** Send a blind courtesy copy to other recipient.

**Size:** Display the MMS size.

**Msg class:** Indicate the type of message.

**Sender visibility:** Select to turn your visibility status on/off.

**Priority:** Options include Normal, High, and Low.

**Delivery report:** Select whether you wish to receive a delivery report or not.

**Read report:** Select to obtain a report as to whether the receiver has read the message.

**Contains DRM:** Indicates whether the message has DRM restriction.

**Expiry time:**

Shows the expiry time and date.

**Date?**

Shows when the message was sent.

## Message setup



→ Message setup

→ MMS → Select function.

## MMS profile

Five MMS profiles can be set. The sending properties are specified in these profiles. If the setting has not yet been set, you will receive the necessary data from the service provider or via the "Setting Configuration" at:

[www.siemens.com/mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)



Select profile



Open to edit the profile.

## Setting options

**Options** Open menu.

Activate, Rename, Change settings.

## User settings

Set the MMS dispatch to suit your requirements:

**Sender visibility:** Select to turn your sent visibility on or off.

**Priority:** Send priority:  
Normal, High, Low

**Delivery report:** Request delivery confirmation for sent messages.

**Read report:** Request confirmation that the MMS has been read.

**Expiry time:** Select the period in which the service centre is to try to deliver the message:  
1 hour, 3 hours, 6 Hours, 12 hours, 1 day, 1 week, Maximum\*  
\* Maximum period that the service provider permits.

**Delivery time:** Transmission from the service centre to the recipient:  
Immediate, Tomorrow

**Retrieval:** Receive complete MMS or only notification of arrival.  
**Automatic**  
Receive complete MMS immediately.  
**Auto. home net**  
Receive complete MMS immediately in home network  
**Manual**  
Only the notification is received.

**Spam filter:** Settings for receipt of promotional MMS.

## Help

Select help to see more details about message setting.

# Voice mailbox/CB

## Voice mailbox



If you have a mailbox, a caller can leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this function and set it manually.

### Setup

The service provider supplies you with two phone numbers:

#### Save mailbox number

Call this phone number to listen to your voice messages.



Enter phone number and confirm with **OK**.

#### Save call divert number

Calls are diverted to this phone number.



Enter phone number and register it with the network with **OK**.

## Listening to a message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once only).

Confirm with **OK** and **Mailbox** depending on your service provider.

## CB services



Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

# Organiser

 →  → Select function.



## Calendar

You can enter new appointments in the calendar. The time and date must be set correctly.

The calendar offers you two views: monthly view and weekly view.

The various entries are colour-coded. Appointments are shown as a coloured bar on the hour division.

Navigation:

 /  Scroll between weeks/  
days/hours.

## Appointments

Appointments are displayed in chronological order in a list.

### Entering a new appointment

<New entry>

Select.

Type:



**Memo:** text input for description.



**Voice memo:** enter voice memos.



**Call:** enter phone number. Shown with alarm.



**Meeting:** text input for description.



**Holiday:** enter start and end date.



**Birthday:** enter name and date.

Different input/selection fields are displayed depending on the type.

The number of fields can be restricted.

#### Additional information



Alarm clock, alarm set.



Scheduler, alarm set.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**).  
The phone does not go to standby mode.  
To deactivate it press any key.

## Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed. The entries are made in the same way as **Appointment** (see "Appointments").

## Notes

T9 makes it easier to write short notes such as shopping lists. Save confidential notes with the phone code.

## Missed appts.

Events with an alarm (**Appointments, Tasks**) to which you have not reacted are listed for reading.

## Dictation machine

Use this function to record short voice memos.

### New recording

<New entry>

Select.



After a brief beep, dictate the memo text.



Switch between pause/record.



End recording. The recording is automatically saved with a timestamp. Rename with **Options**.

## Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

### Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential. You may only use this feature if the other party to the conversation agrees.

## Ringtones

See page 44.

## Alarm clock

See page 44.

## World clock

See page 49.



# Games & app

You may download games and applications from the Internet. Once you download them, they are sent via your phone. Most applications include instructions. Some games and applications are pre-installed on your phone. Also, you may find others here:

[www.siemens.com/fundownloads](http://www.siemens.com/fundownloads) and [wap.siemens.com](http://wap.siemens.com)

## Requirements

Configure WAP profile and the access before you start using the function.

## Download

Select the correct access depending on whether you are loading games or applications:



In addition to URLs and service providers for the download, any available applications/games and folders are displayed.

## Download new



Select a service provider or URL.





Start WAP browser and visit URL.

### Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your Windows® PC using the "Mobile Phone Manager" ([www.siemens.com/cl75](http://www.siemens.com/cl75)).

# Extras

 →  → Select function.

## Calculator

The calculator can be used in a basic version or with an extended range of functions (**Options**).



Enter digit(s).



Navigate to functions.



Use function.

## Unit converter

You can convert various measurement units into other measurement units.

## Sound recorder

Use the sound recorder to record noises and tones for use as ringtones.

### New recording

<New entry>

Select. The remaining time available, as well as the recording time, are shown in the display.

### Start it from another application as follows

The recording display appears:



A brief beep sounds when the recording starts.



Switch between pause/record.



End recording.

The recording is saved with a timestamp in the folder **Sounds**. Rename with **Options**.

### Insert

Transfer the recording into the application.

### Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

## Stopwatch



Two intermediate times can be recorded and saved.

**Start** Start/stop/reset to zero.

## Countdown



A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

## Favourites



# Settings

## Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however: **Normal**, **Quiet**, **Outdoors**, **Car Kit**, and **Headset**.
- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

## Profile settings

Edit a default profile or create a new personal profile:



Select profile.

### Options

Open menu and select **Change settings**.

The list of available functions is displayed.

When you have finished setting a function, return to the profile menu where you can change a further setting.

## Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically when the phone is inserted into the cradle.

## Headset

The profile is only switched on automatically if an original Siemens headset is used.

## Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**.

### Switching aircraft mode on



Scroll to **Aircraft mode**.



Confirm selection.

### Change

Press left soft key to activate profile.

### Yes

Press right soft key to confirm that the phone switches to aircraft mode.

## Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

## Ringtones



Set the tones on the phone to suit your requirements.

## Volume

Set different volumes for types of call/functions.

## Melody & Tone Setting

You may customize the melody and tones (depending on different items: On/Off/Beep) for the following items: Calls, Messages, Appointments& Tasks, Alarm clock, Games, Startup, Shutdown, Open clamshell, and Close clamshell.

## Alarm Clock



### Setting the alarm clock

The alarm will ring at the time you set, even when the phone is switched off. You can set four alarm clocks.



Navigate to the desired alarm clock.



Press Select to open the menu options: Activate, Edit, Delete, and Delete all.

### Editing the Alarm clock

Details include Time, Weekday, Status and Description.

You can set the alarm to repeat with **Pause**.

## Themes



Load a completely new user interface in your phone. At the press of a button, various functions are re-arranged thematically, e.g. start up/shutdown animation, wallpaper, screensaver, start-up/shutdown melody, additional animations.

It is possible that the existing settings could be overwritten.

Theme files are compressed to save memory space. After being downloaded or called up from **My stuff**, these are automatically unzipped when activated.

### Activating a new theme



Select theme.



Activate new theme.



Confirm.

## Display



### Wallpaper

Set wallpaper graphic for display.

### Logo

Choose picture to be displayed instead of the provider logo.

### Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and pressing any key will end the function except if the safety function is activated.

#### Note

The **Digital clock** screensaver reduces the phone standby time.

### Start up anim.

Shown when the phone is switched on.

### Shutdn anim.

Shown when the phone is switched off.

## Own greeting

Is displayed instead of an animation when you switch on the phone.

## Big letters

You can choose between two font sizes for the display.

## Illumination

You can select the illumination duration.

## Keypad backlight

Turn keypad light on/off.

## Hide network name

Select to make network visible/invisible.

## Vibrator



Select to turn the vibration on/off.

## Connectivity



### IrDA

Your phone has an infrared interface. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

When activated the phone will scan for other reachable devices supporting IrDA.

#### Note

This will decrease the standby time.

### GPRS info

(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. Display connection information. Displays the total amount of data transferred and time connected.

### CSD settings

CSD function is available for your cell phone. Before you start transmitting data, you need to complete your CSD settings with information such as user name and password. Please contact your service provider for detailed information.

### GPRS settings

If you are using a GPRS connectivity setting, you need to complete your GPRS setting with information such as user name and password. Please contact your service provider for detailed information.

[www.siemens.com/  
mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care)

### Key setup

See page 52.

## Call setup



### Hide ID



If activated, your phone number will not appear on the other party's display (depending on the service providers).

### Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

### Divert

You can specify when calls should be diverted to your mailbox or other numbers.

#### Setting up call divert (example)

##### Unanswered



Select **Unanswered**. (Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)

##### Change

Confirm and select **Set**, then enter the phone number to which the call will be diverted.

##### Change

Confirm the network setting.

### All calls



All calls are diverted.



Symbol in the top line of the display when in stand-by mode.

Other possibilities for divert: **Not reachable**, **No reply**, **Busy**, **Status check** and **Clear all**.

### Call screening



Only calls from phone numbers that are in the Contacts or in a group are signalled. Other calls are only displayed.

### Any key answer

Incoming calls can be accepted by pressing any key (except for ).

### Minute beep

During the call, you (and only you!) will hear a beep after each minute as a reminder of the time elapsed.



## Phone setup




### Language

Set the language of the display text.

When "automatic" is set, the language chosen by your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

\*#0000# 

### T9 preferred

Activate / deactivate T9 input method.

### Key tones

Set the type of acoustic key acknowledgement.

### Info tones

Set service and alarm tones.

### Auto off

The phone switches off each day at the set time.

### File system

#### Format

(Phone-code protected)

The phone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted. Formatting can last longer than one minute.

### Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

#### More

Press several times to display additional information about the device.

### Master reset

Reset phone to default values (factory setting). This does not affect the SIM card.

## Clock



### Time / date

**Change** First enter the date, then the time.

### Time zones

#### World map

Displays world time zones.



### Date format

Select the display format for the date.

### Time format

Select 24h or 12h.

### Buddhist year

Switch over to the Buddhist year.

### Show clock

Activate/deactivate time display.

### Auto time



 
When activated the time setting will be adjusted automatically by the network.

## Security



### Direct call

Only **one** phone number can be dialed. The required phone code (4 to 8 digits) is set by you and entered at the first security setting.



### Fixed dial

Select to turn on/off the fixed dial function.

### PIN codes

Description, see page 14:

PIN control, Change PIN, Change PIN2, Chg.phonecode

### This SIM only



Your phone is prevented from being used with a **different** SIM card.

## Barrings



Network barring restricts the use of your SIM card.

### All outgoing

All outgoing calls except emergency numbers are barred.

### Outgoing intl. (International outgoing)

Only national calls can be made.

### Out.int.x.home (International outgoing without home country)

No international calls, only calls to the home country.

### All incoming

The phone is barred for all incoming calls.

### When roaming

You will not receive calls when outside your home network.

### Status check

Status check for network barring

### Clear all

Clear all barring.

### Password

Enter password for barring.

## Network



→ Network

→ Select function.

## Line



**Two independent** phone numbers must be registered.

## Network info

The list of GSM networks currently available is displayed.

## Choose network

Network search is restarted.

## Auto network

If activated, the next network is dialled in the order of your "preferred networks".

## Preferred network

Set the service providers you prefer when you leave your home network.

## Band selection



Select from 5 choices: GSM900, GSM1800, GSM1900, GSM900/1800, or GSM900/1900. Make sure that your service provider supports the selected band.

## User group




Depending on the service provider, you can create groups with this service.

These can have access to internal (company) information, for example, or special tariffs apply. Please check with your service provider for details.

## Accessories



→  → Accessories  
→ Select function.

## Car Kit

Only in combination with an original Siemens handsfree car kit. The car kit profile is activated automatically when the phone is inserted into the cradle.

### Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

### Edit profile

Select to personalize the profile.

## Headset

Only in conjunction with an original Siemens headset. If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in.

### Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

### Edit profile

Select to personalize the profile.


# Fast dial

## Soft keys

Assign one phone number or function to each of the two soft keys.

### Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

**Internet** **Briefly** press, and then **Change**.  
Select a new function from the list and confirm with .

### Apply

The "Internet" is just used as an example here.

**Internet** Press and **hold**, the application is started.


## Speed keys

Assign one phone number or function to each of the keys from 2 to 9. Number key 1 is reserved for the mailbox. Before you redefine the number keys 2-9, enable/disable the redefine function.

## Assigning functions



Press a number key (e. g. key 3) **briefly**, and then press **Set**.

Select a new function to be assigned from the list and confirm with .

### Apply

Select a stored phone number or start a stored application (e. g. **Internet**).

In standby mode:



Press and **hold**.

## My menu



Press.

**Shortcuts** Press.

Set up your own menu. The list of 10 entries is preset, but can be changed.

## Changing the menu

You can replace each entry (1-10) with another entry from the selection list.



Select entry.

### Change

Open the function list for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

## Reset all

### Reset all

Select. After a security query, the default setting is reset.

## My stuff

This file management function allows you to organize your file, which is very similar to the function on your PC. Folders have already been created for different data types.



Display the list of folders and files.

### Navigation



Select a file/folder from the list.



Move the cursor freely in the preview.



Open folder or start file with related application.

### Options

Access to various administration functions.

### Pictures/Sounds

The application for the folder currently selected is loaded.

## Download



The browser is started and the download page displayed.

Folder	Description
Pictures	Pictures
Videos	Videos
Animations	Start up/shut down animations
Sounds	Sounds
Themes	Loaded theme (zipped) Theme configuration (unzipped)
Games	Java archive Download info
Misc	Text modules Voice recordings

Depending on the service provider, the structure, content and range of functions in **My stuff** may vary.

# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**[www.siemens.com/  
mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care)**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#), the software version (to display, press \*#06#, then **More**) and if available, your Siemens Service customer number.

You can also get personal advice about our range of products on our Premium Hotline:  
**United Kingdom ..... 0906 9597500**  
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi .....	0 26 42 38 00
Argentina .....	0 80 08 88 25 93
Australia .....	13 00 66 53 66
Austria .....	05 17 07 50 04
Bahrain .....	40 42 34
Bangladesh .....	0 17 52 74 47
Belgium .....	0 78 15 22 21
Bolivia .....	0 21 21 41 14
Bosnia Herzegovina .....	0 33 27 66 49
Brazil .....	0 80 07 07 12 48
Brunei .....	02 43 08 01
Bulgaria .....	02 73 94 88
Cambodia .....	12 80 05 00
Canada .....	1 88 87 77 02 11
Chile .....	8 00 53 06 62
China .....	0 21 23 01 71 88
Colombia .....	01 80 07 00 66 24
Croatia .....	0 16 10 53 81
Czech Republic .....	2 33 03 27 27
Denmark .....	35 25 86 00
Dubai .....	0 43 96 64 33
Ecuador .....	18 00 10 10 00
Egypt .....	0 23 33 41 11
Estonia .....	6 30 47 97
Finland .....	09 22 94 37 00
France .....	01 56 38 42 00
Germany .....	0 18 05 33 32 26
Greece .....	80 11 11 11 16
Hong Kong .....	28 61 11 18
Hungary .....	06 14 71 24 44
Iceland .....	5 11 30 00
India .....	22 24 98 70 00 Extn: 70 40
Indonesia .....	0 21 46 82 60 81
Ireland .....	18 50 77 72 77
Italy .....	02 24 36 44 00
Ivory Coast .....	05 02 02 59
Jordan .....	0 64 39 86 42
Kenya .....	2 72 37 17
Kuwait .....	2 45 41 78
Latvia .....	7 50 11 18
Lebanon .....	01 44 30 43
Libya .....	02 13 50 28 82



Lithuania .....	8 70 07 07 00	Russia .....	8 80 02 00 10 10
Luxembourg .....	43 84 33 99	Saudi Arabia .....	0 22 26 00 43
Macedonia .....	02 13 14 84	Serbia .....	01 13 07 00 80
Malaysia .....	+ 6 03 77 12 43 04	Singapore .....	62 27 11 18
Malta .....	+ 35 32 14 94 06 32	Slovak Republic .....	02 59 68 22 66
Mauritius .....	2 11 62 13	Slovenia .....	0 14 74 63 36
Mexico .....	01 80 07 11 00 03	South Africa .....	08 60 10 11 57
Morocco .....	22 66 92 09	Spain .....	9 02 11 50 61
Netherlands .....	0 90 03 33 31 00	Sweden .....	0 87 50 99 11
New Zealand .....	08 00 27 43 63	Switzerland .....	08 48 21 20 00
Nigeria .....	0 14 50 05 00	Taiwan .....	02 23 96 10 06
Norway .....	22 70 84 00	Thailand .....	0 27 22 11 18
Oman .....	79 10 12	Tunisia .....	71 86 19 02
Pakistan .....	02 15 66 22 00	Turkey .....	0 21 64 59 98 98
Paraguay .....	8 00 10 20 04	Ukraine .....	8 80 05 01 00 00
Peru .....	0 80 05 24 00	United Arab Emirates .....	0 43 66 03 86
Philippines .....	0 27 57 11 18	United Kingdom .....	0 87 05 33 44 11
Poland .....	08 01 30 00 30	USA .....	1 88 87 77 02 11
Portugal .....	8 08 20 15 21	Venezuela .....	0 80 01 00 56 66
Qatar .....	04 32 20 10	Vietnam .....	84 89 20 24 64
Romania .....	02 12 09 99 66	Zimbabwe .....	04 36 94 24

# Care and maintenance

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot areas (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic components.
- Do not drop, knock or shake your phone. Rough handling can damage components inside the device!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, obtain fast and reliable help at our service centres page 55.

## Battery quality declaration

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradually capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

## Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Please note that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

# Product data

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1995/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:  
[www.siemens.com/mobiledocs](http://www.siemens.com/mobiledocs)

**CE 0168**

### Additional information to users

The product was shown to meet the requirements of the R&TTE Directive through third party tests to harmonise standards.

Quanta Computer Inc. hereby declares that this Siemens CL75 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

## Technical Data

GSM class:	4 (2 watt)
Frequency range:	880 ... 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 ... 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 ... 1,990 MHz
Weight:	90g
Size:	87 x 44 x 23 mm (74 ccm)

Li-Ion battery:	750 mAh
Operating temperature:	-10°C ... +55°C
Charging temperature:	+5°C to 45°C
SIM card:	3.0 V
Camera:	VGA incl. 4x zoom, Video recording
Video:	Recording, playback, Packet video, 3GPP; H.263, MPEG4
Sounds:	AAC, AMR-NB, SMAF, SP-Midi, WAV ADPCM, 40 chords polyphonic ringtones (MA3)

### Phone ID

You will need the following details if you lose your phone or SIM card:

The number of the SIM card (on the card):

.....  
 15-digit serial number of the phone  
 (under the battery):

.....  
 The customer service number of the  
 service provider:

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

## Operating Time

The operating time depends on the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

**Call time: 180 minutes**

**Standby time: 220 hours (minimum)**

Action taken	Time (min)	Reduction of standby time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes
* Key input, games, organiser etc.		

# SAR – European Union (RTTE)

## INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed\*\*. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg\*\*\*. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection IC-NIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the net-

work. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0.66 W/kg\*\*\*\*.

The SAR information can also be found on the Siemens web site at

**[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

---

\* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**[www.who.int/peh-emf](http://www.who.int/peh-emf),**

**[www.mmfa.org](http://www.mmfa.org),**

**[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

\*\* The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

\*\*\* averaged over 10 g body tissue.

\*\*\*\*SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at

**[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

# SAR – International (ICNIRP)

## INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*\*. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.66 W/kg\*\*\*.

SAR information can also be found at **[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**. While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

- 
- \* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:  
**[www.who.int/peh-emf](http://www.who.int/peh-emf),**  
**[www.mmfa.org](http://www.mmfa.org),**  
**[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

- \*\* averaged over 10 g of tissue.
- \*\*\* SAR values may vary depending on national requirements and frequency bands. information for different regions can be found at **[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

## Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorized dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For

Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.

- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet

**[www.siemens.com/mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care)** or the Siemens telephone service. The relevant number is to be found in the accompanying user guide

## Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
  - This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
    - The device is opened (this is classed as third party intervention).
    - Repairs or other work done by persons not authorized by Siemens.
    - Components on the printed circuit board are manipulated.
    - The software is manipulated.
    - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
  - Devices fitted with accessories not authorized by Siemens.
  - This Guarantee shall not apply to or extend to services performed by the authorized dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
  - The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
  - Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
  - This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
  - Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
  - The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
  - Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
  - The above provisions does not imply a change in the burden of proof to the detriment of the customer.
- To invoke this Guarantee, please contact our online support on the Internet [www.siemens.com/mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare) or the Siemens telephone service. The relevant number is to be found in the accompanying user guide.



# License agreement

This License Agreement ("Agreement") is between You and Siemens Aktiengesellschaft, Germany ("Siemens"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from Siemens Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if Siemens or any licensor of Siemens ("Licensor") is required to engage in any proceeding, legal or otherwise, CL75 SUG to enforce their rights under this Agreement, Siemens and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related Siemens or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded from Siemens Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by Siemens, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of Siemens, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** Siemens grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

(a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

(b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.

(c) You may not sublicense, rent or lease the Licensed Software.

(d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY SIEMENS, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by Siemens. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER SIEMENS NOR ANY OF ITS LICENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF

MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY SIEMENS OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND SIEMENS AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A SIEMENS REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of Siemens other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL SIEMENS, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFT-

WARE, EVEN IF SIEMENS IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT SIEMENS' LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. TECHNICAL SUPPORT. Siemens has and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and Siemens or the applicable Licensor.

Siemens and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

 
11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.

 
12. APPLICABLE LAW AND FORUM. The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will

 
apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

 
13. MISCELLANEOUS. This Agreement represents the entire agreement between You and Siemens relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of Siemens may require You to agree to additional terms through an online "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, Siemens and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

 
# Menu tree

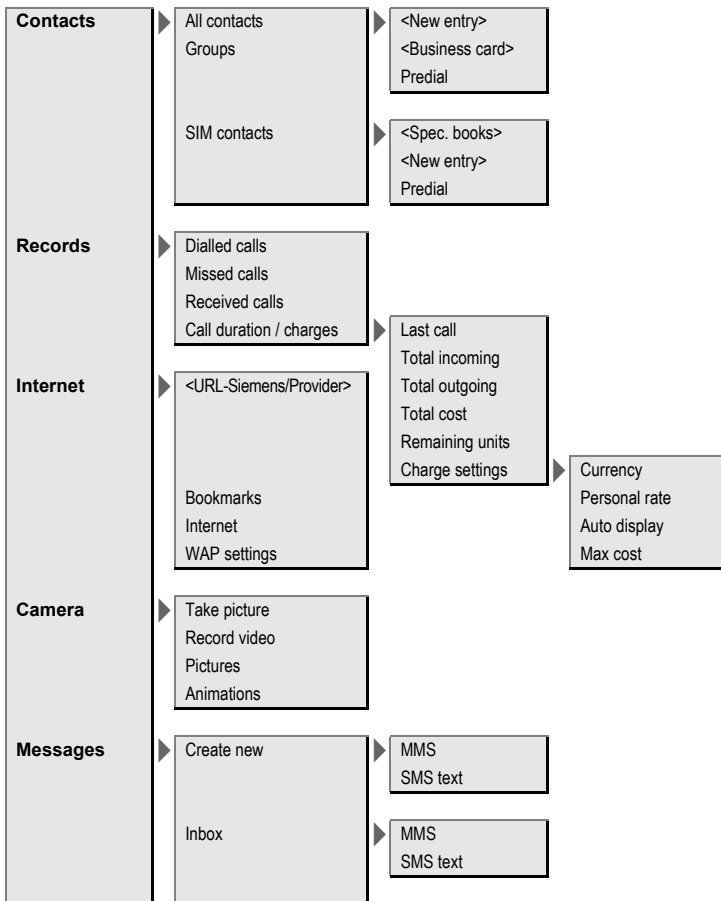

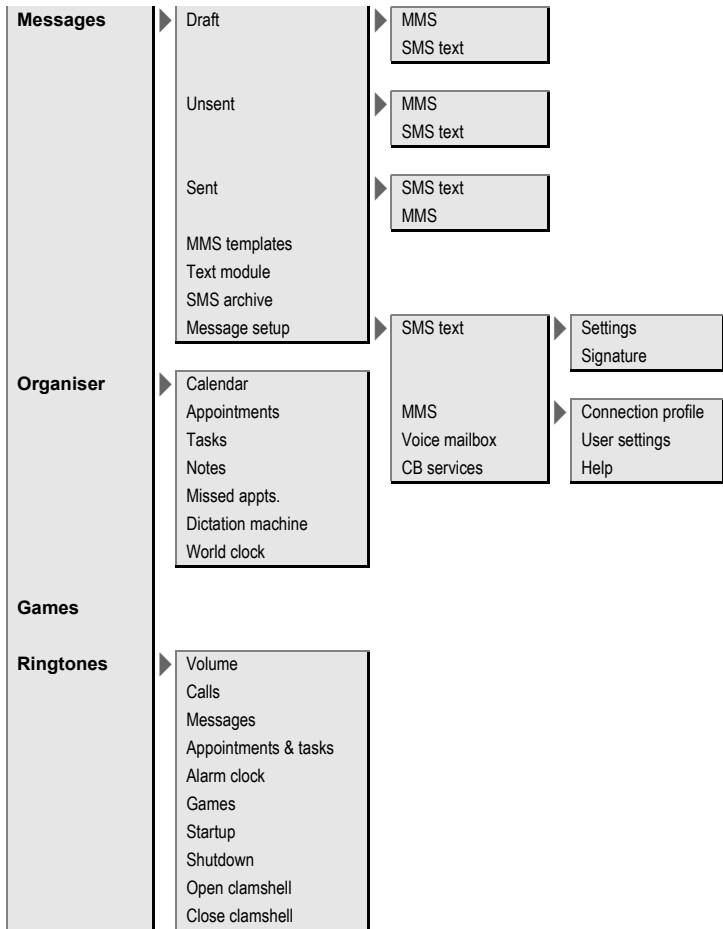 


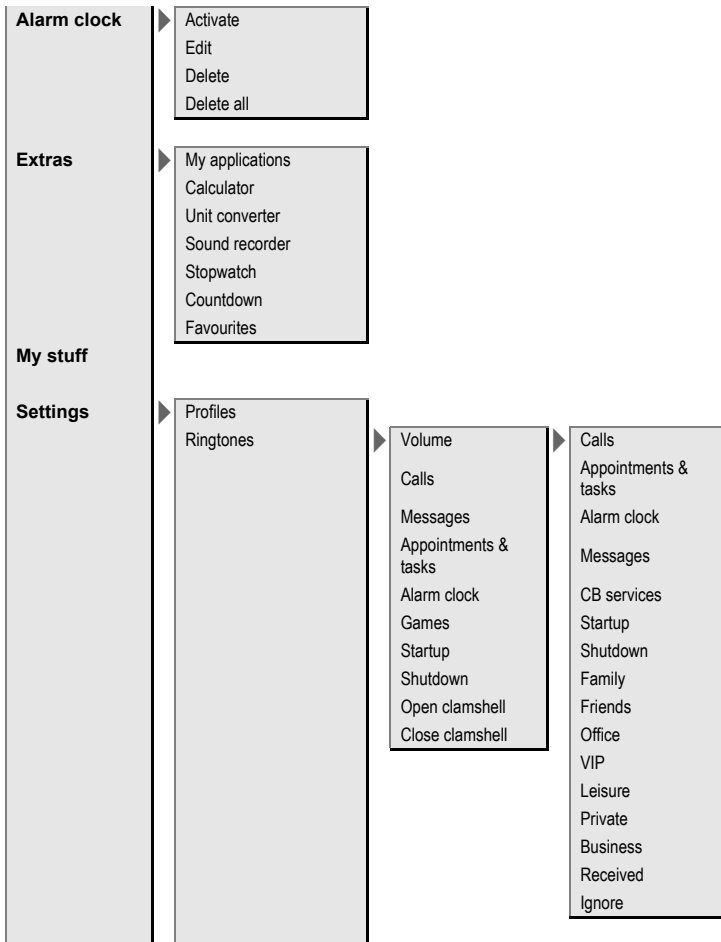

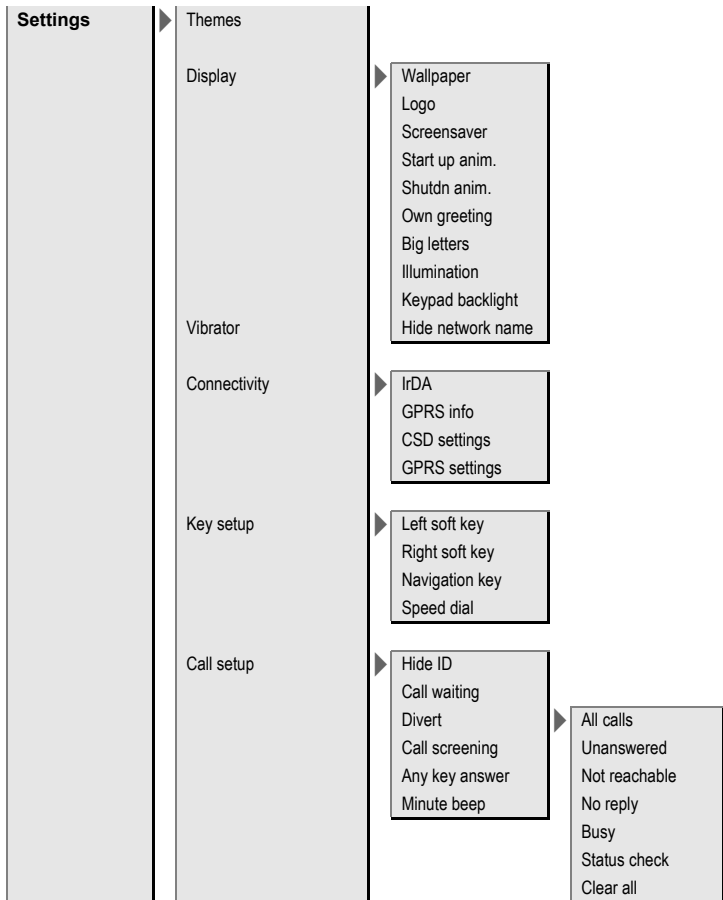

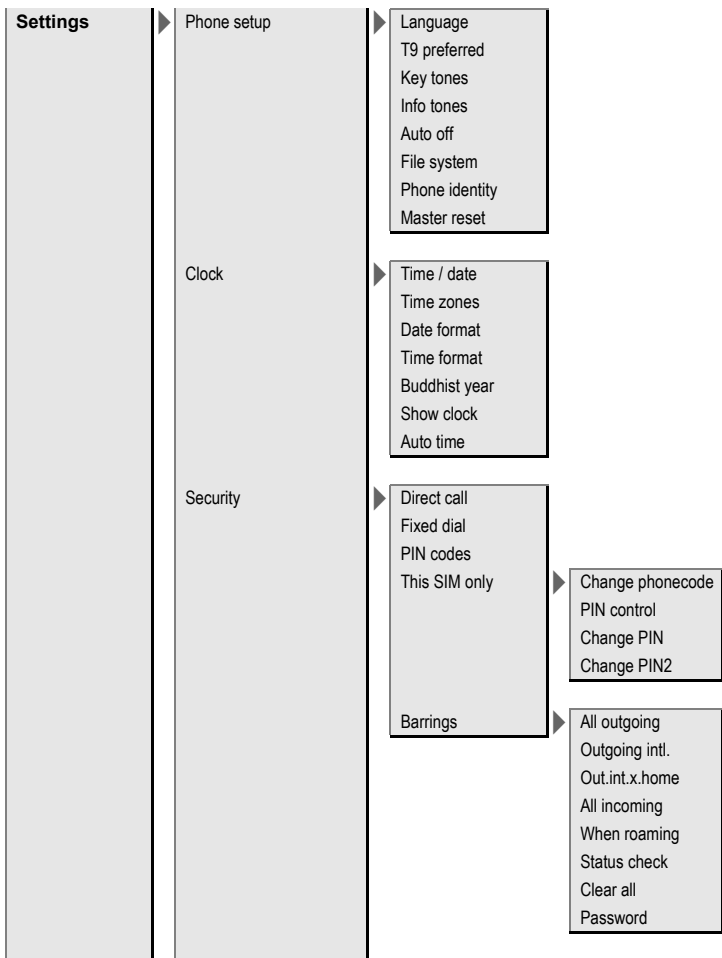



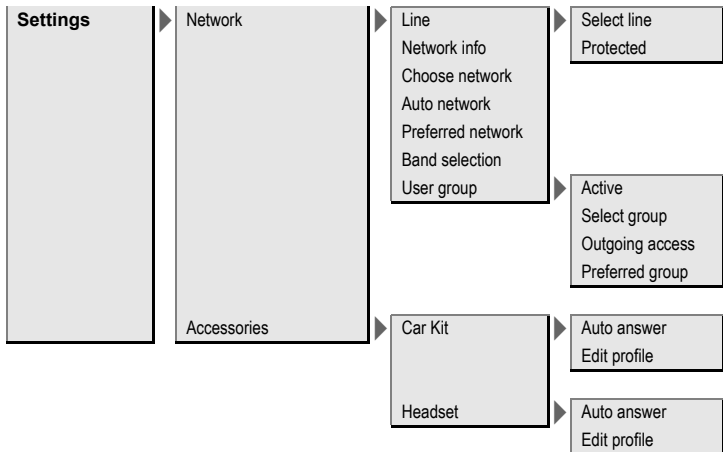

# Index

- A**
- Aircraft mode..... 43
  - Alarm clock..... 44
  - All calls (diversion)..... 47
  - All incoming (barrings) ..... 50
  - Any key answ..... 47
  - Appointments..... 38
  - Auto display
    - Clock..... 49
    - Duration/charges ..... 24
  - Auto. Network ..... 50
- B**
- Band selection ..... 50
  - Battery
    - Charge ..... 8
    - Insert..... 7
    - Operating time ..... 8, 59
    - Quality declaration ..... 57
  - Big letters ..... 45
  - Bookmarks..... 27
  - Buddhist year..... 49
  - Business card ..... 20
- C**
- Calculator ..... 41
  - Calendar ..... 38
  - Call
    - Accept/end ..... 18
    - Barring ..... 50
    - Conference..... 19
    - Divert ..... 47
    - End ..... 18
    - Reject ..... 18
    - Swapping between calls  
(change) ..... 19
  - Call divert ..... 47
  - Call waiting..... 47
  - Calling..... 18
  - Calls dialled (call list)..... 24
  - Calls received (call list) ..... 24
  - Camera..... 28
  - Car kit (setting)..... 43
  - Care and maintenance ..... 57
  - Cell Broadcast (CB)..... 37
  - Charging the battery ..... 8
  - Clear barring ..... 15
  - Clock..... 49
  - Codes..... 14
  - Conference ..... 19
  - Contacts..... 20
  - Control code (DTMF) ..... 19
  - Converter ..... 41
  - Countdown ..... 42
- D**
- Date format..... 49
  - Dialling code ..... 18
  - Display
    - Illumination ..... 45
    - Language..... 48
    - Symbols..... 6
  - Divert..... 47
  - Download ..... 40
  - DRM..... 11
  - DTMF codes (tone sequences) ..... 19
  - Duration/charges ..... 24
- E**
- Emergency number ..... 9
  - Extras..... 41
- F**
- Factory settings ..... 48
  - Filter ..... 36
  - Formatting (phone memory) ..... 48
  - Frequency range ..... 58
- G**
- Games and applications..... 40
  - GPRS ..... 46
  - Groups ..... 21
  - Guarantee certificate ..... 62, 63
- H**
- Handsfree talking ..... 18, 51
  - Headset (setting)..... 43, 51
  - Hide ID ..... 47
  - Highlighting mode ..... 13
  - Hotline..... 55

- I**
- Identity number (IMEI) ..... 48
  - IMEI number ..... 48
  - Inbox ..... 30
  - Info tones ..... 48
  - Information services (CB) ..... 37
  - Infrared (IrDA) ..... 46
  - Input language (T9) ..... 16
  - Internet ..... 26
- K**
- Key tones ..... 48
- L**
- Language ..... 48
  - Logo ..... 45
  - Loss of phone, SIM card ..... 58
- M**
- Maintenance of phone ..... 57
  - Max. cost ..... 25
  - Menu
    - Controls ..... 12
    - My menu ..... 52
    - Speed dialling ..... 12
  - Menu tree ..... 67
  - Message
    - Lists ..... 30
    - MMS ..... 33
    - SMS ..... 31
  - Microphone on/off ..... 18
  - Minute beep ..... 47
  - Missed calls (call list) ..... 24
  - MMS
    - Receiving ..... 35
    - Sending ..... 34
    - Writing ..... 33
  - My stuff ..... 54
- N**
- Network
    - Auto network ..... 50
    - Barring ..... 50
    - Choose network ..... 50
    - Connection ..... 46
  - Notes ..... 39
- O**
- Operating times (battery) ..... 8, 59
  - Organiser ..... 38
  - Own (phone) numbers ..... 23
- P**
- Phone code ..... 15
  - Phone identity number (IMEI) ..... 48
  - Phonebook
    - Calling an entry ..... 22
    - New entry ..... 22
    - Protected SIM ..... 22
    - VIP numbers ..... 22
  - Pictures & sounds (SMS) ..... 31
  - PIN
    - Change ..... 14
    - Control ..... 14
    - Enter ..... 9
    - PIN2 ..... 14
    - Preferred network ..... 50
    - Preventing accidental activation ..... 15
    - Profiles (phone) ..... 43
    - Provider logo ..... 45
    - PUK, PUK2 ..... 14
- R**
- Records ..... 24
  - Redial ..... 18
  - Ringtones ..... 44
- S**
- Safety precautions ..... 2
  - Screensaver ..... 45
  - Security ..... 14, 49
  - Set time/date ..... 49
  - Settings ..... 43
  - Short message (SMS) ..... 31
  - Shut down animation ..... 45
  - Signal strength ..... 11
  - SIM card
    - Clear barring ..... 15
    - Insert ..... 7
  - SMS
    - Archive ..... 31
    - Reading ..... 32
    - Settings ..... 32
    - To group ..... 32
    - Writing ..... 31

SOS .....	9
Sound recorder .....	41
Special characters .....	16
Standard functions.....	13
Standby mode .....	11
Standby time .....	8
Start up animation .....	45
Stopwatch .....	42
Swap .....	19
Switching off the phone	
Automatic .....	48
Manually .....	9
Switching on the phone .....	10
Symbols.....	6
<b>T</b>	
T9	
Text entry.....	16
Word suggestions .....	17
Tasks .....	38
Technical data .....	58
Text module .....	17
This SIM only .....	49
Time zones .....	10, 49

**U**

Unanswered.....	47
User group .....	51

**V**

Voice memo .....	39
Volume	
Handset volume .....	18
Profiles.....	43
Ringtone .....	44

**W**

Wallpaper (display).....	45
WAP.....	40